



## 外形安装尺寸 Mounting Dimension Sheets-overview

### R137

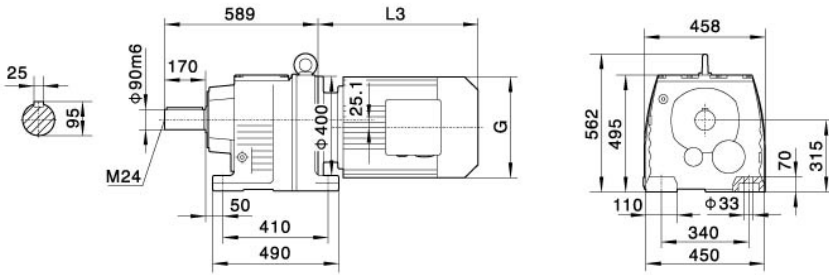


电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.

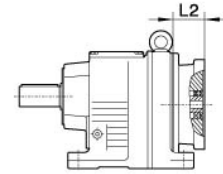


### RF137


Φ450

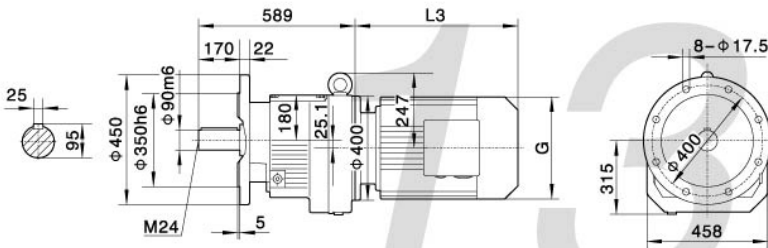


### R..S137

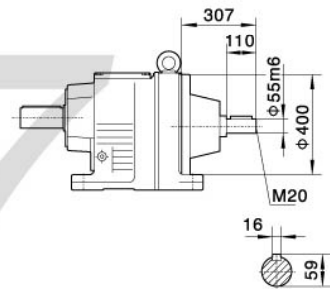

Φ550

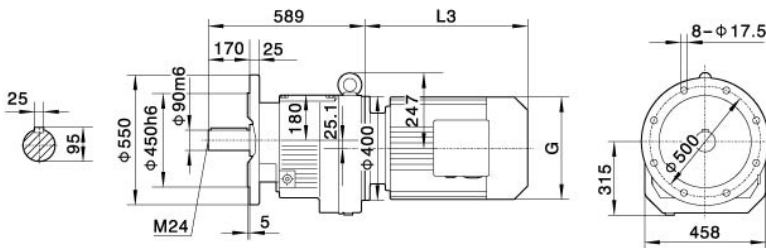

### R..137R77

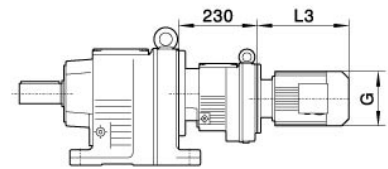

注：其余尺寸见相应的结构形式  
Note: For other values please refer to the opposite structure

Y <sub>2</sub> 电机机座号 Motor size	132S	132M	160M	160L	180M	180L	200	225S	225M	250
功率/4P Power/(kW)	5.5	7.5	11	15	18.5	22	30	37	45	55
L3	388	424	476	519	555	588	654	680	702	771
G	275	275	330	330	380	380	420	470	470	510
L2	126	126	132	132	132	132	132	143	143	174

注：“R..”表示R、RF

Note:“R..”mean R、RF